


JOIST REINFORCEMENT

Simple & Cost Effective...



**Type CF - High
Friction Clamp**

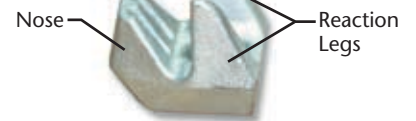

- Standard Joists are not designed to take Point Loads without added Reinforcement
- Concentrated Loads must be applied to Panel Points so Field Strut Members are added
- Strut Panel Points can be added Mechanically to Top and/or Bottom
- No Welding or Drilling means No Weakening of Joist
- No Hot Work Permit or Skilled Labor Required to Install
- CF Clamps offer Guaranteed Frictional & Tension Values at a 5:1 Factor of Safety

**Keep it Simple...
Lindapter It!**

www.lindapterna.com

(888) 724-2323

Email: inquiries@lindapterna.com

lindapter
North America, Inc.

